

# Garmin Mobile™ 10

*GPS receiver with  
Bluetooth® wireless technology*



© 2006 Garmin Ltd. or its subsidiaries

Garmin International, Inc.  
1200 East 151st Street,  
Olathe, Kansas 66062, USA  
Tel. (913) 397-8200 or  
(800) 800-1020  
Fax (913) 397-8282

Garmin (Europe) Ltd.  
Unit 5, The Quadrangle,  
Abbey Park Industrial Estate,  
Romsey, SO51 9DL, UK  
Tel. +44 (0) 870.8501241 (outside the UK)  
0808.2380000 (within the UK)  
Fax +44 (0) 870.8501251

Garmin Corporation  
No. 68, Jangshu 2nd Road,  
Shijr, Taipei County,  
Taiwan  
Tel. 886/2.2642.9199  
Fax 886/2.2642.9099

All rights reserved. Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded, or stored in any storage medium, for any purpose without the express prior written consent of Garmin. Garmin hereby grants permission to download a single copy of this manual onto a hard drive or other electronic storage medium to be viewed and to print one copy of this manual or of any revision hereto, provided that such electronic or printed copy of this manual must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Information in this document is subject to change without notice. Garmin reserves the right to change or improve its products and to make changes in the content without obligation to notify any person or organization of such changes or improvements. Visit the Garmin Web site ([www.garmin.com](http://www.garmin.com)) for current updates and supplemental information concerning the use and operation of this and other Garmin products.

Garmin® is a trademark of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Garmin Mobile™, Garmin Online™, myGarmin™, nRoute™, and PeerPoints™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

SiRF, SiRFstar and the SiRF logo are registered trademarks of SiRF Technology, Inc. SiRFstarIII and SiRF Powered are trademarks of SiRF Technology, Inc. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Garmin is under license. PalmSource, Palm OS, Palm Powered, Graffiti, HotSync and certain other trademarks and logos appearing herein, are trademarks or registered trademarks of PalmSource, Inc. or its affiliates, or its licensor, Palm Trademark Holding Company, in the United States, France, Germany, Japan, the United Kingdom, and other countries. These marks may not be used in connection with any product or service that does not belong to PalmSource, Inc., in any manner that is likely to cause confusion among customers, or in any manner that disparages or discredits PalmSource, Inc., its licensor, its subsidiaries or affiliates. All other brands and trademarks used herein are or may be trademarks of, and are used to identify other products or services of, their respective owners. All rights reserved. Windows and Windows Mobile are registered trademarks of Microsoft Corporation in the United States and other countries. Mac is a trademark of Apple Computer, Inc., registered in the U.S. and other countries. Symbian and all Symbian based marks and logos are trademarks of Symbian Limited. Other trademarks and trade names are those of their respective owners.

## Contents of Your Garmin Mobile™ 10 Package

**GPS 10x** GPS receiver with Bluetooth® wireless technology

**3.7 Volt Lithium-ion battery**

 
**Belt clip** that makes your GPS 10x receiver completely portable

**12-volt power cable** to power and charge the GPS 10x receiver in your vehicle

**DVD-ROM** with nRoute™ navigation software and Garmin Mobile™ XT navigation software and detailed maps

**Yellow sheet** that contains your unit's serial number, registration code for registering on Garmin's Web site, and unlock code to unlock detailed maps

If you ordered your GPS 10x receiver from the Garmin Mobile Buyer's Guide (at [www.garmin.com/mobilephones](http://www.garmin.com/mobilephones)), the contents of your package may not match the contents listed above. In this case, compare your order confirmation and the packing list to the items in this package.

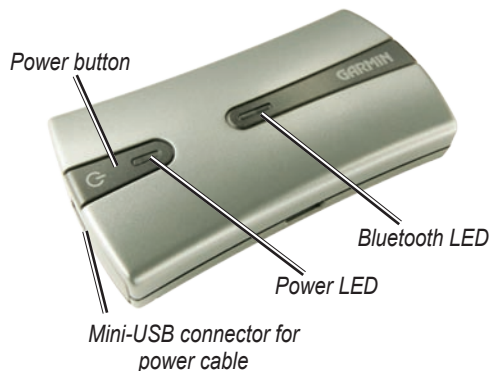


---

**NOTE:** Mobile device refers to the electronic device with Bluetooth® wireless technology that you will be using for navigation. A mobile device can be a laptop or notebook computer, or a handheld device or mobile phone with Windows Mobile® software, Symbian™ software, or Palm OS® software.

---

## ① Install the Battery

 1. Locate the black or gray lithium-ion battery that came in the product box.
2. With your thumbnail, slide the battery cover release tab toward the end of the GPS 10x.
3. Pull the battery cover off.
4. Locate the metal contacts on the end of the lithium-ion battery. Insert the battery so the metal contacts on the battery match up with the metal contacts inside the battery compartment. Press the battery down into place.
5. Replace the battery cover by inserting the tabs into the notches. Press the battery cover closed; the release tab locks the cover in place.

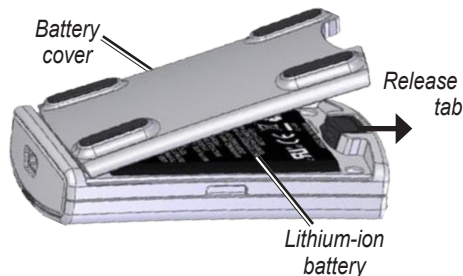

## Replacement Battery

If you need to replace the battery, use a Garmin 3.7 Volt lithium-ion battery pack (010-10840-00). Purchase a replacement battery at <http://my.garmin.com/shop>. You can also use a compatible cell phone battery, such as a Nokia BL-5C.

## ② Charge the GPS 10x Receiver

1. Plug the small end of the power cable into the mini-USB connector on the end of the GPS 10x.
2. Plug the other end of the power cable into an available power outlet in your vehicle.

You can use the GPS 10x receiver while you are charging it. It takes about four hours to charge the battery. A fully charged battery lasts about 22 hours.

### ③ Install the Navigation Software on Your Mobile Device

**Windows Mobile® and Palm OS® Users:** Install Palm Desktop or Microsoft ActiveSync onto your computer before installing the navigation software.

1. Install a memory card into your mobile device.
2. Insert the enclosed installation disk into your computer's DVD-ROM drive.
3. Follow the instructions in the installation disk's setup guide to install Garmin navigation software onto your mobile device.

**Note:** If you are prompted to enter an unlock code, enter the 25-character code listed on the yellow sheet in the product box.



**Windows Mobile® Smartphone users:** If the software installation does not start automatically, use the phone's file explorer to open the file named "Garmin Mobile XT" on the card to install Garmin Mobile XT.

If you purchased a memory card (instead of an installation disk) with this GPS 10x receiver, install the memory card into the mobile device now to automatically install the navigation software.


*Garmin Mobile™ 10 set up and go!*

### ④ Set Up the Navigation Software

**Note:** Install the navigation software before establishing a Bluetooth connection with your mobile device.

1. Press and hold the  **Power** button on the top of the GPS 10x receiver to turn on the GPS 10x.
2. Ensure that the GPS 10x receiver is within 30 feet (10 meters) of your mobile device.
3. Turn on your mobile device and enable the Bluetooth component. (Refer to your mobile device's documentation for specific instructions about enabling Bluetooth wireless technology.)
4. Open nRoute or  Garmin Mobile XT. The first time you open the navigation software, it automatically searches for the GPS 10x receiver.

After your device and the GPS 10x receiver have established a connection, the blue LED on the receiver begins blinking slowly.

If the GPS 10x receiver has not established a Bluetooth connection for several minutes, it turns off automatically. To manually turn the GPS 10x receiver off, press and hold the  **Power** button.

## **Bluetooth LED Status**

- Rapid Flashing Blue: power on, Bluetooth on
- Slow Flashing Blue: Bluetooth link to your mobile device established

## **Power LED Status**

- Flashing Yellow Green: charging in progress
- Solid Yellow Green: battery is charged
- Flashing Orange: low battery
- Solid Orange: faulty battery or system error

## **More Information on the Bluetooth® Wireless Connection**

- Make sure the GPS 10x is turned on.
- If nRoute cannot find your GPS 10x, select **Utilities > Select GPS**, and click **AutoDetect**.
- Make sure the Bluetooth software on your mobile device is properly configured. nRoute connects to your GPS 10x using a COM port.
- The GPS 10x receiver PIN/passkey is **1234**.
- See [www.garmin.com/support/faqs](http://www.garmin.com/support/faqs). Enter “Bluetooth” and click **Search**.


## **⑤ Install the GPS 10x in a Vehicle**

To communicate using Bluetooth® wireless technology, the GPS 10x receiver must be within approximately 30 feet (10 meters) of the mobile device.

To receive satellite signals, place the GPS 10x receiver where it has a clear view of the sky.

## **⑥ Acquire GPS Signals**

Open the navigation software (nRoute or Garmin Mobile XT) on your mobile device. Check that the Blue LED on the GPS 10x receiver is slowly flashing blue, indicating a wireless connection. Go outdoors to an open area, away from tall buildings and trees. Acquiring satellite signals may take a few minutes.

When the Infobar in nRoute displays **Ready to Navigate**, your GPS 10x receiver has acquired satellite signals. When the  bars in the upper-left corner of Garmin Mobile XT are green, your GPS 10x receiver has acquired satellite signals.

## Customize Your Mobile Device's Settings

Set your mobile device's auto-off and other power management settings to be suitable for your navigation experience. Refer to your mobile device's documentation for instructions.

## Navigating with nRoute

For complete information on using nRoute, refer to the built-in Help system. Select **Help > nRoute Help**.

 
**Menu bar:** (along the top of the nRoute window) provides access to the features of the program. Click a heading (such as **Find**) to see the options in that menu. Click one of those options.

**Toolbars:** (below the Menu bar) provide you with quick access to commonly used nRoute features.

**Infobar:** (below the Toolbars) displays your GPS status and navigation instructions and information.

**Map:** shows your current location (indicated with a triangle ▲) and the areas around your location. The map moves as you move to constantly show your location.

**Information tabs:** display specific information about your trip and saved information, such as routes. Click on a tab to display it.

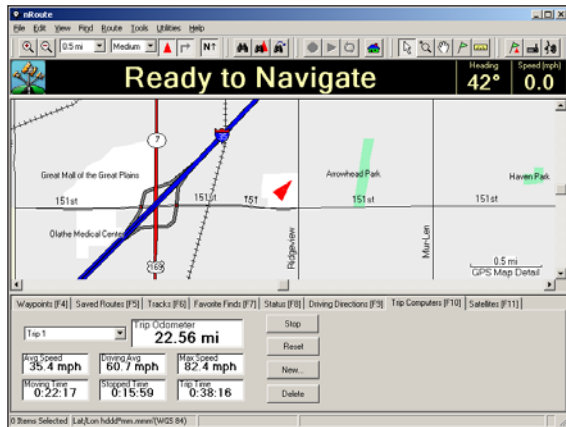

**Status bar:** (on the bottom of the nRoute window) displays your location information and the battery status of the GPS 10x receiver.


## Viewing the Map

After you find a location, select **Route to It** to navigate to the location. The route is indicated with a green line. Directions appear in the InfoBar.

The  position icon shows your position on the map.


## Finding a Destination

The Find Places feature in nRoute™ allows you to search for map features such as cities, addresses, and map features. Follow the steps below to find a map feature, such as a restaurant or hotel.

1. Click  **Find Places**, and then click **Feature**.
2. Select a **Place Category** and, if necessary, a **Place Subcategory**.
3. Enter the name or part of the name of the location in the Name field. Enter the **City**, **State/Province**, and **Country** to refine your search, if necessary.
4. Click **Find**, and click a location in the list.
5. Click **Route To It** to navigate to the location. Or, choose one of the following:

- **Preferences**—customize nRoute's settings.
- **Properties**—view the address and telephone number of the location.
- **Make Waypoint**—save the location.
- **OK**—close the Find Places window and leave the selected location centered on the map.
- **Cancel**—close the Find Places window.

## Playing Voice Instructions


Press the Space Bar or click the  **Speak** button in the toolbar. nRoute gives you voice instructions for the next turn or gives you the satellite status.

## Customizing nRoute

From the Menu bar, select **Edit > Preferences** to customize nRoute's settings. Click a tab and adjust the setting in the tab. Click **OK** when you are done.





## Navigating with Garmin Mobile XT

For complete information on using Garmin Mobile XT and troubleshooting tips, refer to the built-in Help system; select  **Help** on the main Garmin Mobile XT page. Also refer to the *Garmin Mobile XT Owner's Manual* by going to [www.garmin.com/products/garminmobile10](http://www.garmin.com/products/garminmobile10), and clicking the **Manuals** link.

**Where to:** Find addresses, Points of Interest (restaurants, hotels, attractions), intersections, and a variety of other locations in your detailed map.

**View map:** View a map of your current location. The map moves as you move to constantly show your current location.

 **Exit:** close the Garmin Mobile XT application.

 **PeerPoints™:** you have a new PeerPoints message.

 **Message:** you have a new message from the Garmin Online™ server.

 **Tools:** use tools that are useful for navigation, such

as Route Details, PeerPoints, and Garmin Online.

 **Settings:** adjust the settings.

 
 
 **Help:** learn more about Garmin Mobile XT.

**Note:** You may have to select **Menu** to see **Tools**, **Settings**, and **Help**.

## Finding a Destination

The **Where to** menu provides several categories and sub-categories to help you find destinations. You can enter addresses, look up locations you recently found, and view locations you have saved.

1. Select **Where to > Food, Hotels**.
2. Select a category. To find a location by name, select **Spell Name**, enter all or part of the name, and then select the location you want.
3. Select a sub-category or select **All Categories**. A list of locations near your current location appears.

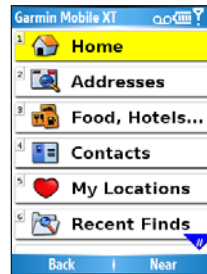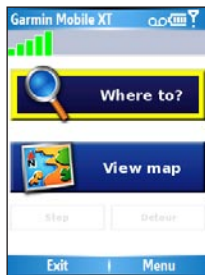

4. Select the location to open the location's information page.
5. Select **Go** to create a route to this location.


### Information page options

 
Select **Go** to create a route to this location, select **Map** to view the location on a map, or select the **Phone icon** to call the location (if available). Select (**Menu >**) **Options** to see more options:

- **Save to My Locations:** saves the location to My Locations, which is a collection of your favorite locations.
- **Save to Contacts:** saves the location to your phone's contact list.
- **Add as Via Point:** adds the location to your current route.
- **Send Location:** sends your location as Garmin Location message.
- **Weather:** shows the current weather condition and a five-day forecast for that location.



### Following the Route

After you find a location, select **Go** to create a route to it. The map automatically opens with your route indicated with a magenta line. The  position icon shows your position on the map. Directions appear at the top of the screen. Your current speed and estimated arrival time appear at the bottom of the screen. If you are not navigating, your current speed and heading appear at the bottom of the screen.

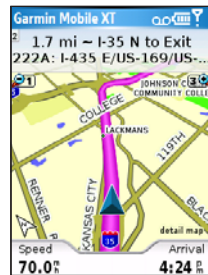

If you leave the map and want to return, select **View map** on the main Garmin Mobile XT page. Select **Stop** to stop the active route.

**Note:** By default, traffic is avoided when routes are generated. To change this and other routing settings, select (**Menu >**) **Settings > Routing > Avoidance Setup**.